


INTERIOR SKYLINE VALANCE


Installation Instructions

Installing RollEase Skyline™ 4 inch Fascia Brackets


Skyline 4 inch brackets include slotted mounting holes, allowing, pre-marking and attaching of the mounting screws without the bracket needing to be in place. Brackets may be installed as usual without taking advantage of the slotted holes and pre-marking as well.

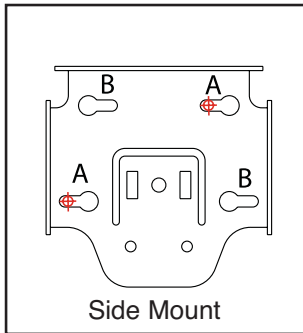


1.) Hold the mounting bracket in position in the window and mark the location where the screws should be positioned in either both A & A locations or B & B locations.

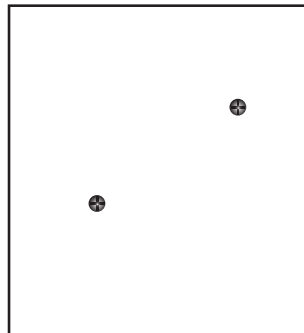


2.) Partially screw in both screws where marked with appropriate anchoring system.

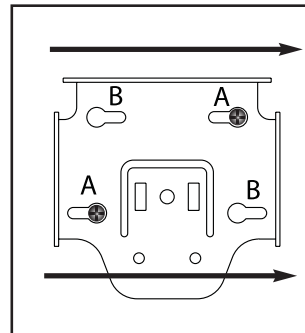


3.) Slip the mounting bracket over the two screws and slide the bracket sideways until the screws heads capture the bracket.

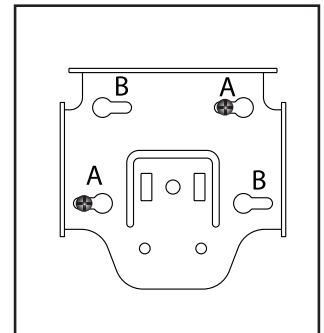



4.) Fully tighten these screws.

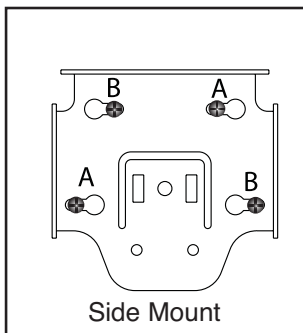

5.) Install additional screws in the additional two holes if required.

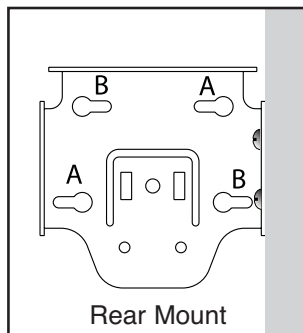

6.) The bracket contains other slotted mounting holes for rear or top mounted shades.

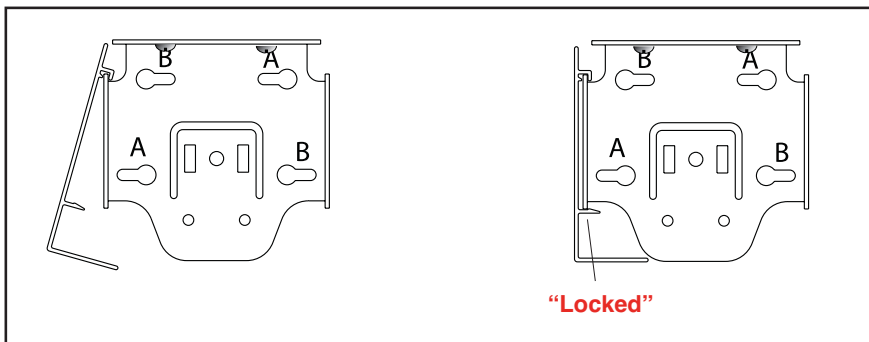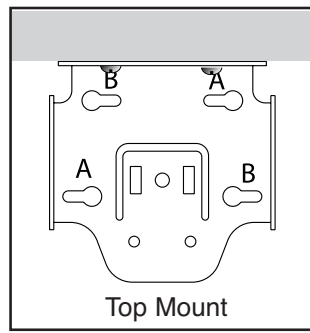

Attaching 4 inch Fascia

1.) Fascia may be cut to the exact desired width, no deductions are required to accommodate brackets, etc.

2.) Hook the fascia on the top of bracket first and rotate downward and press until the hooked feature on the fascia engages and is locked to the bracket.

TECHNICAL