


# ELITE INTERIOR SCREEN WITH CRANK

Installation Instructions

Tools Needed
Drill Measuring Tape 2" Level
Hardware Provided (per shade)
Brackets (2) Gear (1) Gear Bolts with Lock Washers (2) Hand Brace (1) Shade Tube (1)
Hardware Needed
5/16" X 4 1/2" Lag Screws or Appropriate (4 per shade)  3/8" Flat Washers or Appropriate (4 per shade)

## Set-Up Shade For Mounting

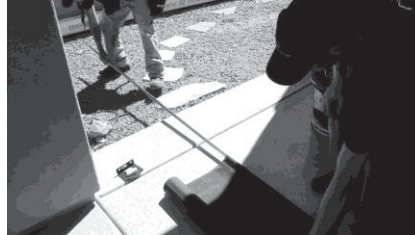


After parts are removed from packaging, temporarily remove bottom bar from fabric on flat surface to make shade lighter to handle.



Bracket



Gear & Bracket

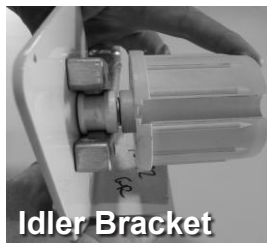

Idler Bracket

## Install Brackets- Attach, Fix, Secure

\*Please mount brackets at width ordered, measurement includes mounting bolts on hardware.

Using appropriate lag bolts and washers, start at one end and attach bracket to mounting surface.

Make sure bracket is level before securing screws.

Repeat same process on opposite side with remaining bracket.



Toll Free 877-792-1775 | Fax 877-792-0031  
swsuncontrolpro.com | sales@swsuncontrol.com

# ELITE INTERIOR SCREEN WITH CRANK

## Installation Instructions

---



### Hang Tube With Fabric - 2 Person Job

Remove bolt from cradle idler and place white bearing on round pin.

With your partner, hold tube with fabric up to brackets.



Starting with your square pin end (operating side of shade), slide square pin into gear (#1).

Once square pin is inserted into gear, take other end of tube (non-operating side of shade round pin) and slide it into idler and replace bolt to lock in place (#2).



Using provided hand brace, roll shade down and insert bottom bar into bottom of fabric (#3).



### Operate Shade

Slide hook end of hand brace into eyelet of gear on shade.

Shade rolls up and down on cable guides.



You're done! Enjoy!